SAFETY/REGULATORY/COMPLIANCE WARNING TO USERS IN THE UNITED STATES

To comply with RF exposure limits, bystanders should stay away from the front of this product, at least 7.9 inches (20 cm), when it is operating. This product complies with all RF exposure requirements while the unit is operating, including specific absorption rate (SAR) limits for the user's hand.

FCC RADIO FREQUENCY INTERFERENCE STATEMENT 47 CFR §15.10(a)

This equipment has been tested and found to comply with the limits for a Class A digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate RF energy and may cause harmful interference to radio communications if not installed and used in accordance with the instruction manual. Operating this equipment in a residential area is likely to cause harmful interference, in which case, depending on the regulations in effect, the user may be required to correct the interference at their own expense.

For more information, visit us on the web at www.transcore.com.



Contact us:

 Sales Support:
 800.923.4824

 Technical Support:
 505.856.8007

8600 Jefferson Street NE Albuquerque, NM 87113

Quick Start Instructions

Encompass® 1 Rugged Flex



Thank you for purchasing the TransCore Encompass 1 Rugged Flex (E1R Flex), the right tool for all of your data collection needs.

What's in the Box:

- E1R Flex Unit
- Handstrap
- Rechargeable Battery Packs (2 sets)
- Stylus
- AC Power Adapter

Getting Started

Press and hold the power button, located on the front of the unit on the lower right side, to turn the unit on.



Note: The power button can be configured to shut down, switch user, log off, lock restart, sleep, or hibernate. Go to Control Panel, Select Personalization, Select Taskbar, Select StartMenu.

Charging the Unit

To charge the battery packs, assemble the power cord and AC adapter. Plug the DC end of the adapter into the power connector on the unit and connect the power cord into a standard electrical outlet.

Note: You may use the unit while it is charging.



Screen Touch Calibration

The touch calibration can be reconfigured for precision operation. Go to **Control Panel**, Select **Hardware and Sound**. Under Tablet PC Settings, select **Calibrate the screen** for pen or touch input. On the **Display** tab, under **Display Options**, select **Calibrate** and then **Yes** to allow the program to make changes. Follow the on-screen instructions to calibrate the touch screen.

You can navigate the screen with a stylus, USB mouse, or by touch. To activate an icon, double-tap it.

Read Your First Tag

Locate the E1R USTP icon and double-tap the icon to select it.



Follow the prompts and read the first tag with the E1R Flex.

Refer to the USTP Host Software Instructions for details on how to set up and use the host software application.

